



## Popular Version Card Reader Keypads For Access Control



## Programming & Installation Manual




## TABLE OF CONTENTS

<b>INTRODUCTION</b> .....	4
<b>FEATURES &amp; SPECIFICATIONS</b> .....	4
Package Contents .....	4
<b>INSTALLATION</b> .....	5
Precautions .....	5
DK-2810 - Surface Mount Low Profile Keypad .....	5
DK-2821(P) - Flush/Surface Mount Keypad .....	6
DK-2861(P) - Weatherproof Touch Sensing Keypad .....	7
DK-2865(P) - Weatherproof Tact Switch Keypad .....	7
DK-2871(P) - Weatherproof Surface Mount Keypad .....	8
DK-2890(P) - Weatherproof Mullion Mount Keypad .....	9
<b>THE FUNCTION OF FACILITIES</b> .....	10
The Connection Terminal & Connection Wire Harness .....	10
The On-Board LED Indicators .....	11
The Pacifier Tones & The LED Signals .....	11
<b>FEATURE PROGRAMMING &amp; OPERATION INSTRUCTIONS</b> .....	12
Set System into Programming Mode with The Master Code .....	12
Direct Access to Programming Mode with The "DAP" Code – 8 0 8 0 .....	12
Refresh The System with The "Refreshing Code" --- 9 9 9 9 .....	13
The Default Values of The Keypad .....	13
<b>KEYPAD PROGRAMMING MAKE SIMPLE – For General Users</b> .....	14 - 15
<b>FEATURE PROGRAMMING -- KEY IN AND STORE THE DESIRED VALUES</b> .....	16
Important Note - Programming Criteria for Codes .....	16
Record A Master Code .....	17
Record A Super User PIN .....	17
Operation And Functions of The Super User PIN .....	18
Record The Common User PINs for Output 1 .....	18
Record-Delete PINs or Cards for Output 1 .....	19
Examples - Programming And Operation .....	20-21
Visitor Codes .....	22
Configuration of The Output Modes for Output 1 .....	23
Personal Safety And System Lock-up .....	23
User PIN Entry Mode - Auto or Manual .....	24
Pacifier Tones On-Off Selection .....	24
Output Operation Announcer .....	25
Status LED Flashing On-Off during Standby .....	25
Intelligent Egress Button-An Unique Feature of a Contemporary Keypad .....	26
Where And Why"Going Out" Needs Attention .....	26


## APPLICATION HINTS FOR THE AUXILIARY TERMINALS

### (A) TAMPER N.C.

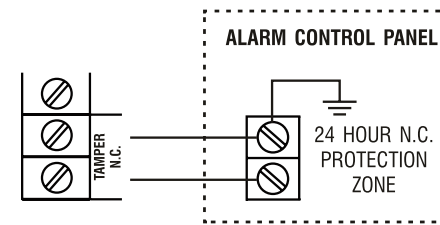


The tamper switch is Normally Closed while the keypad is secured on gang box. It is open when the keypad is removed from the gang box. To prevent sabotage, connect these terminals in series with a 24 hour N.C. protection zone of an alarm system if required.

### (B) DOOR BELL N.O. [Door Bell Button is not available in DK-2821(P)]

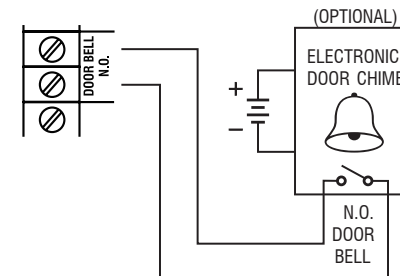

The connection of the Door Bell is optional. The door bell contact on the keypad is prepared for triggering of an low power door chime only. DO NOT use it as a high voltage power path for a door bell. Please refer to the model of your keypad for the power rating of the door bell contact.

**DK-2890(P)**

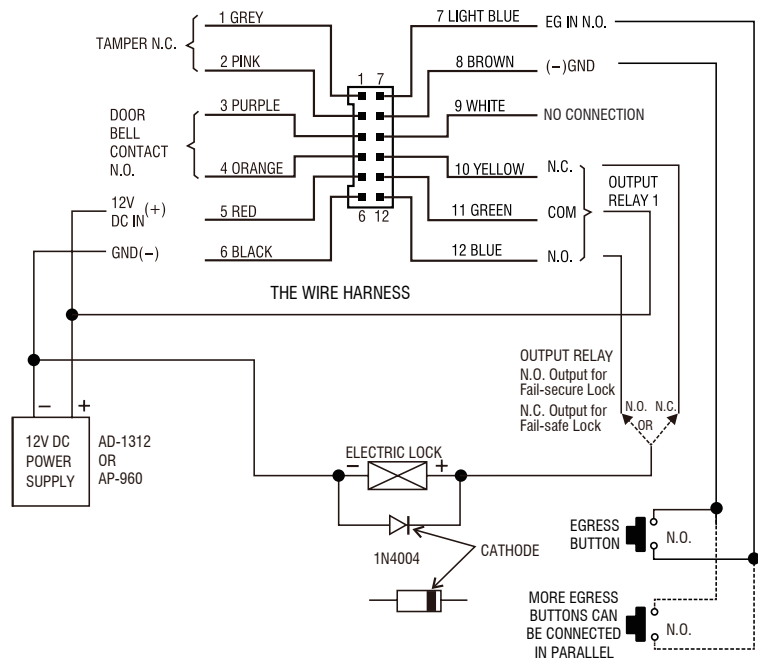

Egress Delay and Warning ..... 27  
 Configurations of The Egress Warning And Alarm ..... 27  
 Egress Delay Timer ..... 27  
 Close the Programming Mode ..... 28  
**PROGRAMMING SUMMARY CHART** ..... 29-30  
**BASIC WIRINGS OF A STAND ALONE ELECTRIC DOOR LOCK** ..... 31  
 DK-2810 & DK-2871(P) ..... 31  
 DK-2821(P) ..... 32  
 DK-2861(P) & DK-2865(P) ..... 33  
 DK-2890(P) ..... 34  
**APPLICATION HINTS FOR THE AUXILIARY TERMINALS** ..... 35

## INTRODUCTION

The popular version keypads are the simplified keypads of their full feature models, which keep the necessary features for operating electric lock and providing low cost solution in the access control systems.

## FEATURES & SPECIFICATIONS


- 1,000 User PINs and/or EM Cards
- 50 Visitor Codes with Programmable Valid Time for Guests and Temporary Staff
- User Controlled Lockup on After Office Hours or Nobody at Home
- Programmable System Lockup for False Trials
- Auto or Manual Code Entry
- Intelligent Egress Button with Programmable Conditions for "Going Out"
- ON-OFF Programmable for The Pacifier Tone & The Flashing LED
- N.C. & N.O. Relay Dry Contacts Compatible with Fail-safe and Fail-secure Electric Locks
- 50mA/24VDC Max Tamper Switch N.C. Dry Contact
- Operating Voltage: 12 VDC Nominal, 11-15VDC
- Operating Current: 50mA(Quiescent), 120mA Max.
- -20 Deg C to +70 Deg C
- 5-95% Relative Humidity, Non-Condensing
- ABS plastic Housing

Specifications are subject to change for modification without notice.


### PACKAGE CONTENTS

- One popular version keypad
- Two EM cards
- One Pack of Mounting Screws
- One Programming & Installation Manual

## DK-2861(P) AND DK-2865(P)

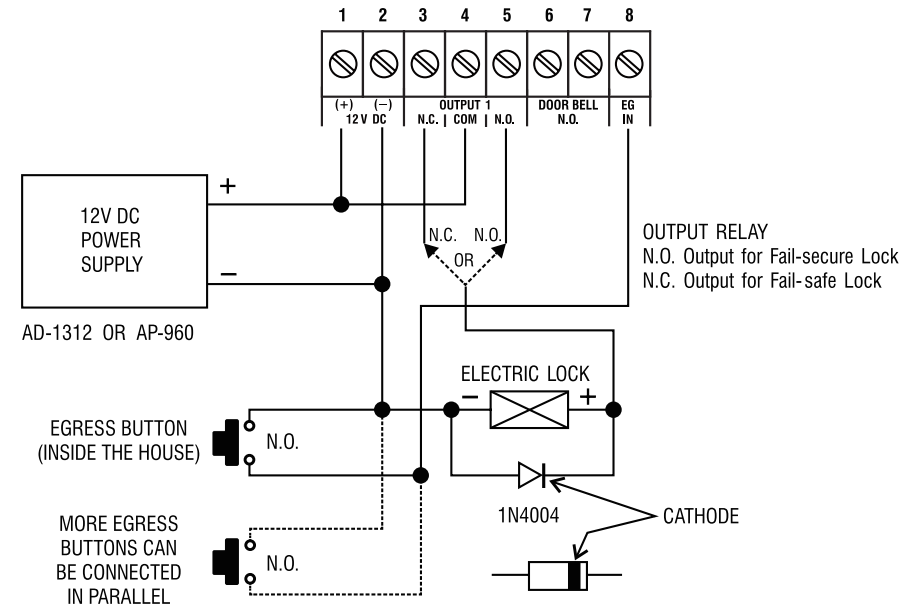

## DK-2821(P)

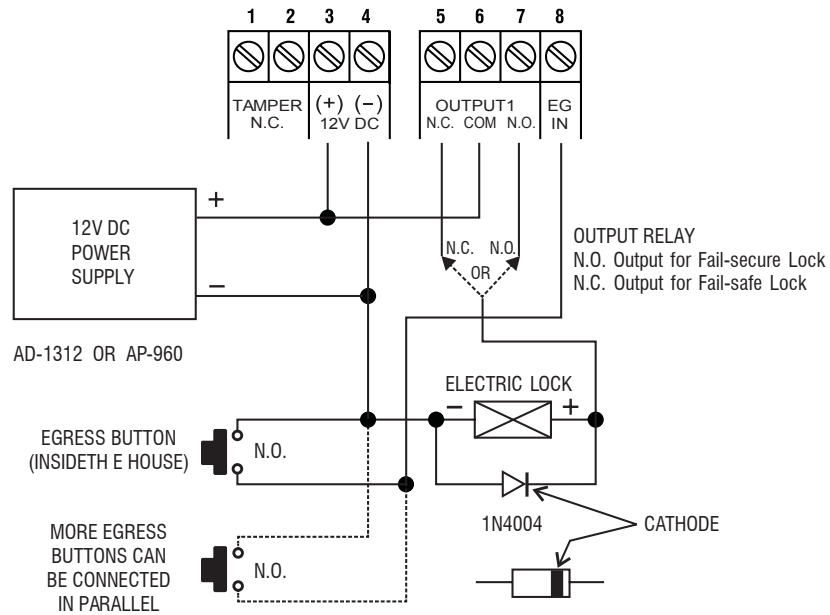

## INSTALLATION

### PRECAUTIONS

#### 1) Prevent Interference:

The EM Card reader is working at the frequency of 125Khz. Precautions are necessary in installation.


- Make sure the location for installation has no strong low frequency electro-magnetic wave signals. Especially in the range of 100-200Khz
- If there is more than one keypads with the same operation frequency installed closely in the same location, make sure that they are at least 60cm (2ft) apart from each other to prevent interference

#### 2) Prevent Accidental Short Circuit:

In the previous experience, most of the damages caused in the installation are accidental touching of the components on circuit board with the wires carrying power. Please be patient to study the manual to become familiar with the specifications of the system before starting the installations.

- Do not apply power to the system while it is in installation.
- Check carefully all the wirings are correct before applying power to the system for testing.

## DK-2810 -- SURFACE MOUNT LOW PROFILE KEYPAD

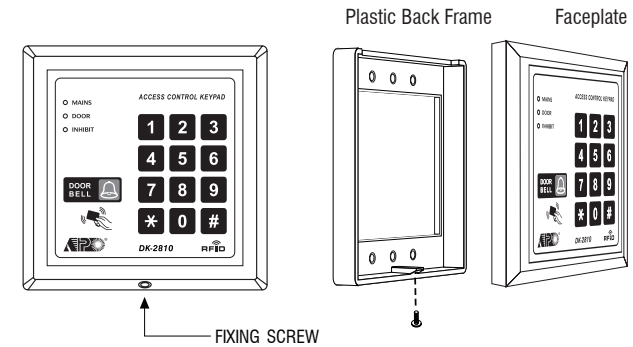


### CONNECTION TERMINALS

1	2	3	4	5	6	7	8	9	10
TAMPER N.C.	DOOR BELL N.O.	(+) 12V DC	(-) 12V DC	EG IN	OUTPUT N.C.	COM	N.O.		


### ADDITIONAL PRODUCT FEATURES

- Tact Switch Keyboard
- 5A/24VDC Max. N.C. & N.O. Output Relay Dry Contacts
- 50mA/12VDC Bell Button N.O. Dry Contact
- Indoor Use Only, IP-50
- Surface Mount Installation
- Weight: 180gs
- Size: 117(H)X117(W)X21(D)mm
- Popular Version of The DK-2811

## DK-2821(P) -- FLUSH/SURFACE MOUNT KEYPAD

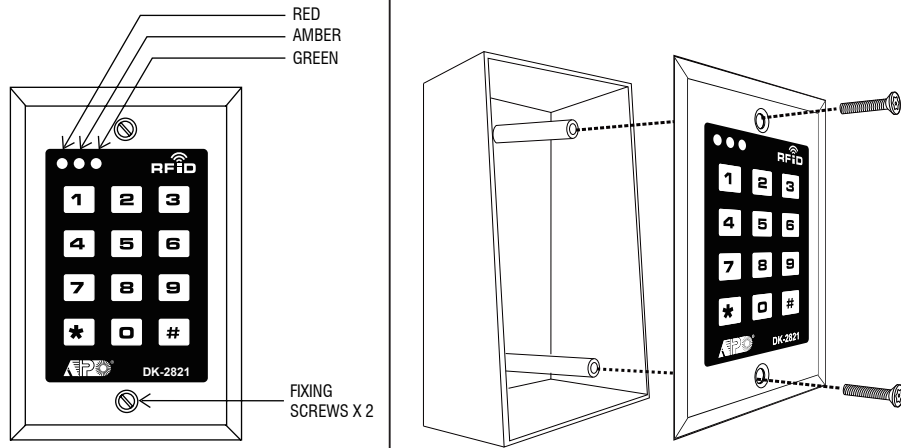

## CONNECTION TERMINALS

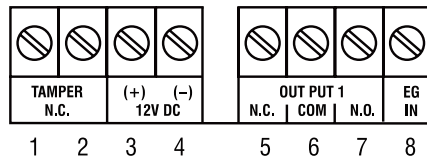

## ADDITIONAL PRODUCT FEATURES


- Epoxy Coated Silicone Rubber Back-lit Keyboard
- Stainless Steel Faceplate
- 5A/24VDC Max. N.C. & N.O. Output Relay Dry Contacts
- Indoor Use Only, IP-50
- Weight : 180gs
- Size : 117(H) x 72(W) x 43(D)mm
- Fits Standard U.S Single Gang Box
- Flush Mount on Gang Box or Surface Mount on The Supplied Plastic Box
- Popular Version of The DK-2821

## BASIC WIRINGS OF A STAND ALONE ELECTRIC DOOR LOCK

### NOTE:

- Connect the 1N4004 as close as possible to the lock in parallel with the lock power terminals of the lock to absorb the back EMF to prevent it from damaging the keypad. The 1N4004 is not required if the electric lock is AC operated.
- To avoid Electro-Static-Discharge from interfering with the operation of the keypad, always ground the (-) terminal of the keypad to earth.

## DK-2810 AND DK-2871(P)

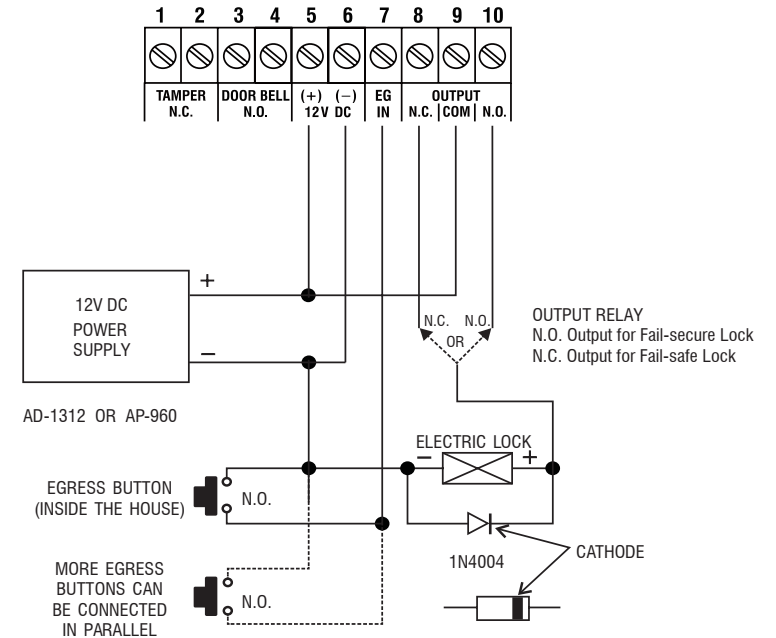


9 0	Egress Delay Warning	<b>CODE 1 – FUNCTION MODE:</b> 1---Momentary, No warning 2---Momentary, with warning 4---Hold Contact, No warning 5---Hold Contact, with warning  <b>CODE 2 – DELAY TIME:</b> 0---No Delay 1-99 Seconds	<input type="text" value="9"/> <input type="text" value="0"/> <input type="text" value="CODE 1"/> <input type="text" value="CODE 2"/> <input type="text" value="#"/>	Mode = 1 Momentary, No warning TIME = 0 No Delay
-----	----------------------	---	--	--


SYSTEM CODES	FUNCTION	CODE ENTRY	RESULTS
0 0 0 0	Factory Set Master Code for User to set system in programming Mode at the first time.  THIS IS NOT A PERMANENT SYSTEM CODE & IT IS CHANGED IF A NEW MASTER CODE IS PROGRAMMED.	<input type="text" value="0"/> <input type="text" value="0"/> <input type="text" value="0"/> <input type="text" value="0"/> * * OR <input type="text" value="NEW MASTER CODE"/> * *	System in Programming Mode
9 9 9 9	<b>REFRESH CODE --</b> Refresh the system and set all its function back to default values.	<input type="text" value="9"/> <input type="text" value="9"/> <input type="text" value="9"/> <input type="text" value="9"/> #	All programmed data are cleared and back to the default values except the Master Code
8 0 8 0	<b>DAP CODE--</b> Direct access to programming mode. Valid only in the power-up delay period	<input type="text" value="8"/> <input type="text" value="0"/> <input type="text" value="8"/> <input type="text" value="0"/> #	System in Programming Mode
0 9 9 9	USER PINs / Codes / Cards whole group clearance Code – Key in the Code to clear all the users in the Location  <b>LOCATIONS:</b> 10--- User Group 1 40--- Vistor Group	<input type="text" value="LOCATION NO."/> <input type="text" value="0"/> <input type="text" value="9"/> <input type="text" value="9"/> <input type="text" value="9"/> #	Whole group of users in the selected location are cleared
* *	Exit Programming Code	* *	The system back to normal operation after programming

### DK-2861(P) -- WEATHERPROOF TOUCH SENSING KEYPAD

### DK-2865(P) -- WEATHERPROOF TACT SWITCH KEYPAD

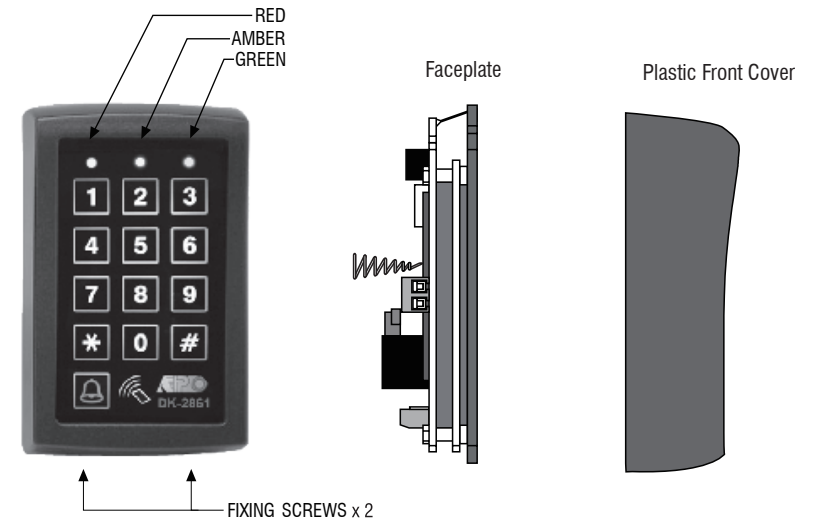


### CONNECTION TERMINALS

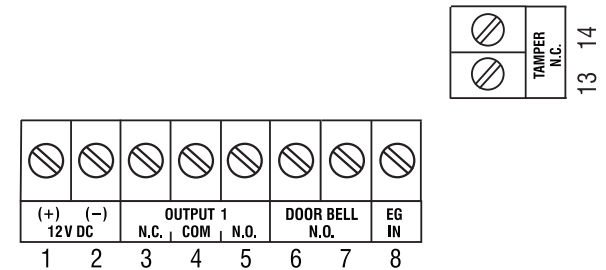

### ADDITIONAL PRODUCT FEATURES

- DK-2861(P)--Touch Sensing Back-lit Keyboard
- DK-2865(P)--Tact Switch Back-lit Keyboard
- 5A/24VDC Max. N.C. & N.O. Output Relay Dry Contacts
- 1A/24VDC Max. N.O. Bell Button Relay Dry Contact
- Indoor or Outdoor Use, IP-55, Weatherproof
- Surface Mount Installation
- Weight : 200gs
- Size : 126(H) x 74(W) x 35-40(D)mm
- Popular Versions of The DK-2861 & DK-2865

## DK-2871(P) -- WEATHERPROOF SURFACE MOUNT KEYPAD

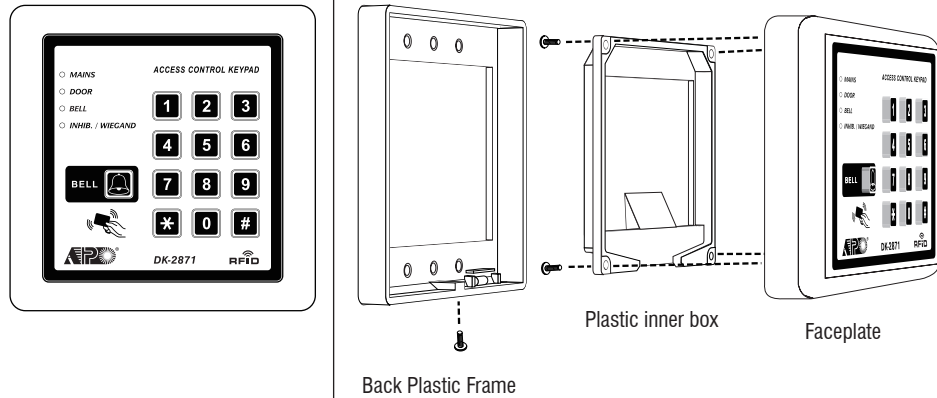

### CONNECTION TERMINALS

1	2	3	4	5	6	7	8	9	10

### ADDITIONAL PRODUCT FEATURES


- Epoxy Coated Silicone Rubber Back-lit Keyboard
- 5A/24VDC N.C. & N.O. Output Relay Dry Contacts
- 1A/24VDC N.O. Bell Button Relay Dry Contact
- Indoor or Outdoor Use, IP-55, Weatherproof
- Surface Mount Installation
- Weight : 230gs
- Size : 117(H) x 117(W) x 28(D)mm
- Popular Version of The DK-2871

## PROGRAMMING SUMMARY CHART

LOCATION	FUNCTION	ENTRY LIMITS & CODE OPTIONS	CODE ENTRY	FACTORY DEFAULT
0 1	Master Code	4-8 Digits	<input type="text" value="0"/> <input type="text" value="1"/> MASTER CODE <input type="text" value="#"/>	NIL
0 2	Super User PIN	4-8 Digits	<input type="text" value="0"/> <input type="text" value="2"/> SUPER USER PIN <input type="text" value="#"/>	NIL
0 3	Common User PIN for O/P 1	4-8 Digits	<input type="text" value="0"/> <input type="text" value="3"/> COMMON USER PIN 1 <input type="text" value="#"/>	NIL
1 0	User PINs / Cards for O/P 1	<b>CODE 1 – MEDIA:</b> 1---EM Card 2---Private User PIN 3---EM Card+Sec User PIN 4---EM Card+Com User PIN 5---Deletion of User PIN <b>CODE 2 – USER ID:</b> 000-999---Group 1 <b>CODE 3 – USER PINs / Cards:</b> 4-8 Digits / Cards	<input type="text" value="1"/> <input type="text" value="0"/> CODE1 <input type="text" value="CODE2"/> <input type="text" value="CODE3"/> <input type="text" value="#"/>	NIL
4 0	Visitor Codes	<b>CODE 1 – VISITOR ID:</b> 01-50 <b>CODE 2 – VALID PERIOD:</b> 00---One Time 01-99 Hours <b>CODE 3 – VISITOR CODE:</b> 4-8 Digits	<input type="text" value="4"/> <input type="text" value="0"/> CODE1 <input type="text" value="CODE2"/> <input type="text" value="CODE3"/> <input type="text" value="#"/>	NIL
5 1	O/P Mode for O/P 1	<b>OUTPUT MODE &amp; TIME:</b> 0--- Start / Stop 1---99999 Seconds, Momentary	<input type="text" value="5"/> <input type="text" value="1"/> O/P MODE & TIME <input type="text" value="#"/>	5 Seconds
6 0	Personal Safety & Lock-up	<b>LOCK-OUT CODE:</b> 1---10 Trial, Lock-up 60 Sec. 5-10---5-10 Trial, Lock-up 15 Minutes 00---No Lock-up	<input type="text" value="6"/> <input type="text" value="0"/> LOCK-UP CODE <input type="text" value="#"/>	Code = 1, 10 Trials, Lock-up 60 Seconds
7 0	PIN Entry Mode	<b>ENTRY MODE:</b> 1---Auto Mode 2---Manual Mode	<input type="text" value="7"/> <input type="text" value="0"/> ENTRY MODE <input type="text" value="#"/>	Mode = 2, Manual Mode
7 1	Pacifier Tone ON-OFF	<b>FUNCTION MODE:</b> 0---OFF 1---ON	<input type="text" value="7"/> <input type="text" value="1"/> FUNCTION MODE <input type="text" value="#"/>	Mode = 1, Pacifier Tone ON
7 2	Output Announcer		<input type="text" value="7"/> <input type="text" value="2"/> FUNCTION MODE <input type="text" value="#"/>	Mode = 1 Announcer ON
7 3	Standby LED Flashing		<input type="text" value="7"/> <input type="text" value="3"/> FUNCTION MODE <input type="text" value="#"/>	Mode = 1, Flashing On

**EXAMPLES:**

 **Example 1:** Set Egress Button in Momentary contact 5 seconds with delay & warning beep

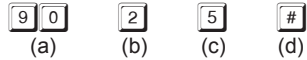


(a) Egress function programming, (b) Momentary contact with warning, (c) Delay time of 5 seconds to release door, (d) Entry confirmation

**Example 2:** Set Egress Button in Holding contact of 10 seconds with warning beep



(a) Egress function programming, (b) Holding contact mode with warning, (c) Holding time of 10 seconds to release door, (d) Entry confirmation

 **Example 3:** Set Egress Button in Momentary contact without delay (This is the default setting)

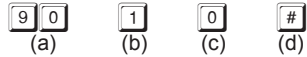

(a) Egress function programming, (b) Momentary contact without delay, (c) Release door instantly, (d) Entry confirmation

**CLOSE THE PROGRAMMING MODE**

( \* \* )

Always close programming mode with \* \* to set system back to normal Operation after programming.

VALIDATION



**DK-2890(P) -- WEATHERPROOF MULLION MOUNT KEYPAD**




Back Cover

Inner box  
(Main Box)

Front Cover

**CONNECTION WIRE HARNESS**

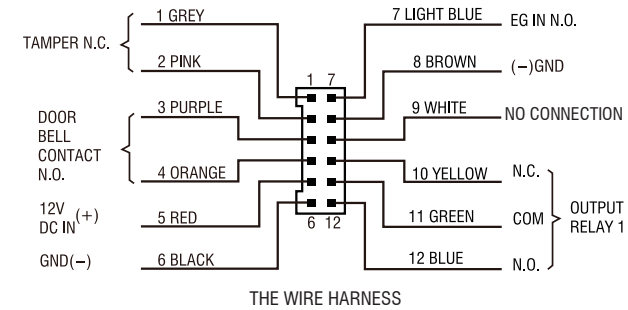

**ADDITIONAL PRODUCT FEATURES**

- Epoxy Coated Silicone Rubber Back-lit Keyboard
- Mullion Mount Plastic Housing
- 2A/24VDC Max. N.C. & N.O. Output Relay Dry Contacts
- 1A/24VDC Max. N.O. Bell Button Relay Dry Contact
- Indoor or Outdoor Use, IP-55, Weatherproof
- Weight : 150gs
- Size : 168.5(H) x 46.5(W) x 24(D)mm
- Popular Version of The DK-2890

**A) THE CONNECTION TERMINALS AND CONNECTION WIRE HARNESS**

Please refer to the model number of your keypad for the terminal arrangement corresponding to the descriptions.

**1) 12V DC (Power Input Terminal)**

Connect to 12V DC power supply. The (-) supply or the (-) GND is the common grounding point of the keypad.

**2) OUTPUT 1 (Output Relay 1)**

Relay dry contacts controlled by the user PINs or Cards, recommended for door lock strike. N.C. is a Normally Closed contact terminal, N.O. is a Normally Open contact terminal and COM is the common terminal of the two contacts. Use N.C. output for Fail-safe locking device; and N.O. output for Fail secure locking device. The relay is programmable for Start/Stop (toggle) mode or Momentary timing mode. See programming Location 51 for the details.

**3) EG IN ( Egress Input)**

A Normally Open (N.O.) input terminal referring to (-) ground. With the help of connecting a normally open button to activate Output 1 for door opening in the same manner of using the User PINs or Cards.

Egress button is usually put inside the house near the door. More than one egress buttons can be connected in parallel to this terminal. Leave this terminal open if not used.

See Programming Location 90 for more information about the Egress Button with other features.

**4) TAMPER N.C. (Tamper Switch Normally Closed Contact)**

A normally closed dry contact while the keypad is secured on the its box. It is open while keypad is separated from the box. Connect this N.C. terminal to the 24 hour protection zone of an alarm system if necessary.

**5) DOOR BELL (Output Relay Contact for Door Bell)**

It is a Normally Open (N.O.) relay dry contact with maximum rating of 24VDC/1Amp. It is prepared as a triggering contact of a low voltage door chime. The contact point keeps close as long as the bell button on the keypad is pressed.

**Note:**

- a) The Bell contact rating of the DK-2810 is 50mA/12VDC Maximum Only.
- b) DK-2821(P) has no Door Bell contact output



**CONFIGURATIONS OF THE EGRESS WARNING AND ALARM**

Key in the number to enable 1, 2, 4 or 5 configurations described below:

- 1** --- **Momentary Contact Mode without Warning -- (Default)**
  - Press the Button once. No warning or alarm is given during Egress Delay.
  - Good for silent area. The people have to wait for the door open until the delay time reaches.
- 2** --- **Momentary Contact Mode with Warning Beep**
  - Press the Button once. The system gives Warning Beeps during the Egress Delay.
  - Good for the place required attention. The keypad beeps during the people are waiting for the door open.
- 4** --- **Holding Contact Mode without Warning**
  - Press and hold the Button. No warning or alarm is given during the Egress Delay.
  - Good for the silent area. The people require to press & hold the button until the delay time reaches for the door open.
- 5** --- **Holding Contact Mode with Warning Beep**
  - Press and hold the Button. The system gives Warning Beeps during Egress Delay.
  - Good for the place required attention. The keypad beeps while the button is kept pressed during the people are waiting for the door open.

**EGRESS DELAY TIMER**

- 0** --- **No Delay -- (Default)**  
Output 1 activates instantly (the door is released instantly) when the Egress Button is pressed.
- 1 - 99** --- **Egress Delay Timing**  
Put any number of 1 to 99 into the box to enable the Egress Delay. The number is the time in second, which starts to count when the Egress Button is pressed. Output 1 activates (the door is released) when the delay time reaches.

**NOTE:**

- 1) Momentary Contact --** The Egress Delay starts to count when the egress button is momentarily pressed. Output 1 activates automatically (door is released) when the delay time reaches.
- 2) Holding Contact --** The user **MUST** hold the egress button in contact for the whole period of the Egress Delay time until Output 1 activates. If the egress button is released before the end of the Egress Delay, the timer will stop to count and reset.
- 3) The Egress Delay does not affect the operation of the User PINs/Cards for Output 1. The User PINs/Cards always give INSTANT action.**

## **INTELLIGENT EGRESS BUTTON – AN UNIQUE FEATURE OF A CONTEMPORARY KEYPAD**

Most of the keypads for access control are just for controlling of “Going In” from outside. It is not enough for today’s access control systems. In fact, controlling of “Going Out” is also very important in many public passage areas. They are not allowed to use locks or digital keypads for stopping of “Going Out” due to safety reasons. Such as hospitals, kindergartens, elderly homes, convenient stores, emergency exits etc.. The wardens, teachers, shopkeepers and the guards are always required to keep an eye on people to prevent unattended leaving, shoplifting, and illegal use of the emergency exits.

The Intelligent Egress Button can be programmed to do something to get the attention of the person on duty before the door is opened. The button offers programmable egress delay, delay with warning, holding button required for the delay, momentary button contact with warning for the delay.

Location 90 is the place for setting the desired functions for the Egress Button.

The functions programmed to the Egress Button do not affect the normal operation of the system with its keypad. For the safety consideration, the operation of the keypad with PIN, Code or Card is always in the first priority to give instant action to the output relay 1 for door strike.

It is **NOT** required to program the Egress Button with the special function in normal use. Just leave it on its default values.

### **WHERE AND WHY “GOING OUT” NEEDS ATTENTION**

Examples for some areas may need an Intelligent Egress Button:

#### **Hospital:**

Some of the patients are not allowed to leave the ward without doctor’s permission. An egress button with exit delay and warning beeps will help the nurse or warden to get the attention to the door when the egress button is pressed. Further setting of the egress button with holding contact for the delay even gives higher level of security to a controlled door.

#### **Kindergarten:**

Young children are always active. Some of them may be willing to go out to explore their ways of playing. For safety reason, teachers have to watch all of them in the attended area. Leaving school alone without the companion of parents or teacher is dangerous to the young children. An egress button with delay and warning beeps will be helpful to prevent the children trying to go out without getting the attention of the teacher.

#### **Elderly Home:**

Elderly needs constant attention and care. Some old people have poor memory. They may forget the way to come back if they leave home alone. An egress button with delay and warning beep will easily get the attention of the warden before the door is open.

#### **Convenient Store:**

Most of the convenient stores have just only one or two shopkeepers on duty. They are usually the cashier. Shoplifting may easily happen while the shopkeeper is busily serving customers at the cashier desk. A holding contact egress button with delay and warning beeps may help to stop most of the shoplifting. As the thief knows that he is gotten attention by the shopkeeper before the door is open.

#### **High Traffic Passage:**

A short buffer time may be necessary for opening a door outward after pressing the egress button for those exits open to a high traffic passage. An egress button with short delay and warning beeps helps the user to pay attention to the people passing by to prevent hitting them when the door is pushed outward.

#### **Emergency Exit:**

Emergency Exit is not open to the public for daily use. It is for emergency case only. It is usually closed and watched by the security guards. The egress button of this keypad can be programmed to offer exit delay with warning beeps when the door is forced to open or the door is open after the exit delay expired. It is an useful tool to get the attention of the person on duty.

## **B ) THE ON-BOARD LED INDICATORS**

- **MAINS (AMBER)** ----- It flashes on Standby. It shows the system status in synchronization with the beep tones. The standby flashing can be set to OFF in programming. See Location 73 for the details
- **DOOR (GREEN)** ----- It lights up for Output 1 activation.
- **INHIBIT(RED)** -----It lights up while the output relay 1 is inhibited.
- **BELL(RED)** -----It lights up while the bell Relay is making Contact. [DK-2871(P)only]

## **C ) THE PACIFIER TONES & THE LED SIGNALS**

The buzzer and the amber LED indicator give following tones and signals respectively for system status:

<b>STATUS</b>	<b>TONES *</b>	<b>LED SIGNALS</b>
1) On Programming Mode	-----	ON
2) Successful Key Entry	1 Beep	1 Flash
3) Successful Code / Card Entry	2 Beeps	2 Flashes
4) Unsuccessful Code / Card Entry	5 Beeps	5 Flashes
5) Power Up Delay	Continuous Beeps	Continuous Flashes
6) Output Relay Activation **	1 Second Long Beep	
7) On Standby ***	-----	1 Flash in 1 Second Interval
8) System Refreshing	-----	Fast Flashes for 2.5 Minutes
9) The Card or PIN Already Stored in System	1 Long Beep	-----

### **NOTE:**

\* All Pacifier Tones can be ON or OFF through the programming option at Location 71

\*\* The Output Relay Activation beep can be selected through the programming option at Location 72

\*\*\* The Standby flashing can be ON or OFF through the programming option at Location 73

## FEATURE PROGRAMMING & OPERATION INSTRUCTIONS

### SET SYSTEM INTO PROGRAMMING MODE WITH THE MASTER CODE

#### IMPORTANT NOTE:

- 1) **DO NOT TURN OFF POWER** while the keypad is in Programming Mode. Otherwise, it may cause data lost/error to the programmed features in the memory.
- 2) The Keypad beeps after power up. Wait 1 minute until the end of the power up delay, then key in the Master Code for setting the system into programming mode.
- 3) For the owner's convenience in programming at the first time, the factory has put a Master Code **0 0 0 0** into the keypad (**It is NOT a default code**). To compromise security, in all cases, the owner should program a new Personal Master Code to invalidate the factory set Master Code after the keypad is owned.

MASTER CODE                      VALIDATION

#### MASTER CODE

- The Master Code can be a factory set master code or the private master code that was set by the owner.
- Validate the master code with \* \* . 2-beep confirms a valid master code. The Mains LED (Amber) is constantly ON after the system is set in the programming mode.

### DIRECT ACCESS TO PROGRAMMING MODE WITH THE “DAP” CODE -- 8 0 8 0

**Set System Into Programming Mode with DAP Code In Case Of The Master Code Is Forgotten !!**  
 The owner requires to apply the following procedures precisely to set the system into programming mode with the DAP code **8 0 8 0**.

- 1) Switch OFF all the power for 1 minute to ensure that the system is fully discharged.
- 2) Switch ON power again. The system is in Power-up Mode for 1 minute and the buzzer gives beeps during the whole period. This is the only time limit for setting the system to Direct Access to Programming (**DAP**).
- 3) Press the Egress Button (EG IN) once first to enable the DAP function.
- 4) Key in the DAP Code **8 0 8 0** and validate it with \* \* , **the existing Master Code in the memory is erased** and the power up beep stops. The keypad turns itself into programming mode like using the Master Code and it is ready to accept the new programming data.
- 5) If the Egress Button is not pressed and the DAP code is not keyed in within the power up period, the system will set itself to normal operation mode. To set it back to power-up mode, repeat procedures 1-4

EGRESS BUTTON                      DAP CODE                      VALIDATION

PRESS ONCE

#### DAP CODE

- The DAP code is fixed on **8 0 8 0** and it is valid only in the Power-up Period after the Egress Button is pressed.
- Validate the DAP code with the \* \* .
- **2-beep** confirms the system is in the Programming Mode; and the Mains LED is constantly ON.
- See “**RECORD A MASTER CODE**” at “**Location 01**” for the details of programming a new master code.

### OUTPUT OPERATION ANNOUNCER

(Location 72)

LOCATION                      FUNCTION MODES                      VALIDATION

#### OUTPUT OPERATION ANNOUNCER

The announcer gives notification beep to the users and the visitors on the operation status of the outputs. There are two notification modes available for the selection. The notification is also OFF while the Pacifier Tone OFF mode in the Location 71 is selected.

#### 1 --- 1 Second Long Notification -- (Default)

1 second notification beep is given when the output relay is activated with a valid Card/Code or Egress Button. It is prepared to notify the person outside the door when the lock is released and the door can be opened. It is good for the door lock device gives no sound when it activates, such as a magnetic lock.

#### 0 --- 2 Short Beeps Notification

2 short beeps notification is given when the output is activated with a valid Card/Code.

### STATUS LED FLASHING ON-OFF DURING STANDBY

(Location 73)

LOCATION                      FUNCTION MODES                      VALIDATION

#### STANDBY FLASHING ON-OFF

Some people find the flashing light of the status LED (the amber LED) is annoying during the keypad is on standby, especially at the night time. The standby flashing can be ON-OFF with the setting here.

#### 1 --- Standby Flashing ON -- (Default)

The Status LED gives Standby Flashing all the time during the keypad is on standby. It also gives all the light indications showing the operation status of the system.

#### 0 --- Standby Flashing OFF

The Standby Flashing is disabled but it does not affect the system status indications. All the light indications from it are unchanged.

## USER PIN ENTRY MODE -- Auto or Manual

(Location 70)

LOCATION      ENTRY MODES      VALIDATION  
7 0      1 or 2      #

### USER PIN ENTRY MODES

Two modes 1 and 2 are available for User PIN entry options. The **EM Card is always in Auto Entry Mode** and is not affected by the selection here.

#### 1 --- Auto Entry Mode

Auto Entry Mode requires no pressing of the # key following the User PIN for code checking.

In the Auto Entry Mode, the **User PINs MUST be set in the same digit length of the Master Code** (For example, if the Master Code is 5 digits, then all User PINs must be in 5 digits as well. All other User PINs not in 5 digits become invalid). When the number of digits reaches, the system will check the User PIN automatically. Good for high traffic access control.

#### 2 --- Manual Entry Mode – (Default)

Manual Entry Mode always requires the # key following of the User PIN for code checking.

The User PINs can be **4-8 digits arbitrary** and they are **NOT** required to be in the same digit length of the Master Code. Manual Entry increases the level of security in the code trial by the unauthorized people.

## PACIFIER TONES ON-OFF SELECTION

(Location 71)

LOCATION      FUNCTION MODES      VALIDATION  
7 1      1 or 0      #

### PACIFIER TONES ON-OFF MODES

The Pacifier Tone is the Beep Tones from the keypad, which include the tones of Successful Key entry (1 beep), the Output Operation Announcer (2 beeps or 1 long beep) and the Unsuccessful User Code/Card entry (5 beeps).

#### NOTE :

The beeps for the Warning and the Power-up Delay do not belong to pacifier tones and can not be set to OFF.

#### 1 --- Pacifier Tone ON – (Default)

All the Pacifier Tones available from the keypad are enabled. They are the response tones indicating the operation status of the keypad after the Card/User Code is entered.

#### 0 --- Pacifier Tone OFF

All the Pacifier Tones are OFF. Good for place needs for a silent environment.

## REFRESH THE SYSTEM WITH THE “REFRESHING CODE” -- 9 9 9 9

The system can be refreshed to clear all the old data stored and back to its ex-factory default values.

#### IMPORTANT NOTE:

Make sure that you really want to clear **ALL the OLD** data before entering of the Refreshing Code. The keypad will be back with its default values like a new unit. Re-program of the desired values are necessary.

REFRESHING CODE      VALIDATION  
9 9 9 9      #

### REFRESHING CODE

- The Code **9 9 9 9** is for refreshing of the system. Once it is keyed in and validated with #, all the values programmed previously will be cleared **EXCEPT the Master Code**.
- The refreshing takes around 2.5 minutes. During the keypad is being refreshed the Status LED (Amber) flashes fast until the end.

## THE DEFAULT VALUES OF THE KEYPAD

### PROGRAMMING

LOCATION	PARAMETERS	DEFAULT FUNCTIONS & VALUES
0 1	Master Code	0 0 0 0 Factory Set, Not a default value *
0 2	Super User PINs	Nil ----- User Program Required
0 3	Common User PIN 1	Nil ----- User Program Required
1 0	User PINs & Cards for O/P 1	Nil ----- User Program Required
4 0	Visitor Codes	Nil ----- User Program Required
5 1	O/P Mode of The O/P 1	Time = 5 Sec, Momentary
6 0	Personal Safety & Lock-up	Code = 1, 10 False Code/Card Lock-up 60 Sec
7 0	User Code Entry Mode	Code = 2, Manual Entry Mode
7 1	Pacifier Tones ON-OFF Selection	Code = 1, Pacifier Tone ON
7 2	O/P Operation Announcer	Code = 1 Sec, Notification Beep ON
7 3	Status LED Standby Flashing ON-OFF	Code = 1, Flashing Enabled
9 0	Egress Delay & Warning	Code 1 = 0, Instant, No Delay Code 2 = 1, Momentary Contact without Warning

#### NOTE:

The DAP Code **8 0 8 0** and the Refreshing Code **9 9 9 9** are fixed in the operating system program. It can not be changed in any ways or be influenced by the system in default setting.

## KEYPAD PROGRAMMING MAKE SIMPLE – For General Users

The keypad has many functions for user's selection. For those general users taking the keypad for door lock strike only, most of the features can be kept in their Default values. Only the User PINs / Cards and a private Master Code are necessary to program for the system.

The keypad accepts **1) Card only, 2) PIN only, 3) Card + PIN or 4) Card + Common User Code** to operate its outputs.

### PROGRAMMING

**NOTE:** Wait 1 minute until the end of the power up delay.

#### 1) Set System into Programming Mode with The Factory Set Master Code 0 0 0 0

0 0 0 0 \* \* ---- 2 beeps, system is in Programming Mode

**Note:** If the Master Code is forgotten, use the DAP Code to set the system into programming mode. See DAP CODE 8080 on the previous page for the details.

#### 2) Change The Factory Set Master Code to Owner's Private Master Code for Security Reason

0 1 3 2 8 9 # ---- 2 beeps, 3 2 8 9 is a Master Code for example here only  
3289 is the new Master Code and the 0000 is erased

#### 3) Record an "EM Card" to Operate The Output 1 for Door Open

1 0 1 0 0 1 READ CARD #  
(a) (b) (c) (d) (e)

- (a) 10 = Programming Location for Output 1
- (b) 1 = Programming option for EM Card only
- (c) 001 = One of the 1,000 User IDs for the User PIN/Card from 000-999
- (d) Read Card = Put the Card close to the card reader
- (e) # = Confirm the card is read, 2 beeps

#### 4) Set an "User PIN" to Operate The Output 1 for Door Open

1 0 2 0 0 2 8 3 2 1 #  
(a) (b) (c) (d) (e)

- (a) 10 = Programming Location for Output 1
- (b) 2 = Programming option for User PIN only
- (c) 002 = One of the 1,000 User IDs for the User PIN/Card from 000-999
- (d) 8321 = The User PIN that is programmed for door open. 8321 is an User PIN for example here only
- (e) # = Confirm the User PIN, 2 beeps

#### 5) Record an "EM Card + User PIN" to Operate The Output 1 for Door Open


1 0 3 0 0 3 READ CARD 6 1 2 3 #  
(a) (b) (c) (d) (e) (f)

- (a) 10 = Programming Location for Output 1
- (b) 3 = Programming option for EM Card + User PIN. (The User PIN can be repeated use or proprietary)
- (c) 003 = One of the 1,000 User IDs for the User PIN/Card from 000-999
- (d) Read Card = Put the Card close to the card reader
- (e) 6123 = The User PIN to be used with the EM Card. 6123 is an User PIN for example here only.
- (f) # = Confirm the Card+PIN is stored, 2 beeps

## CONFIGURATION OF THE OUTPUT MODES OF OUTPUT 1

(Location 51)

The relay output of this keypad is programmable for Start/Stop or Timing modes. Apart from the door access control, alarm arm-disarm control, it is also an **universal timer for automatic operator in industry** with its 99,999 seconds (over 24 hours) programmable timer.

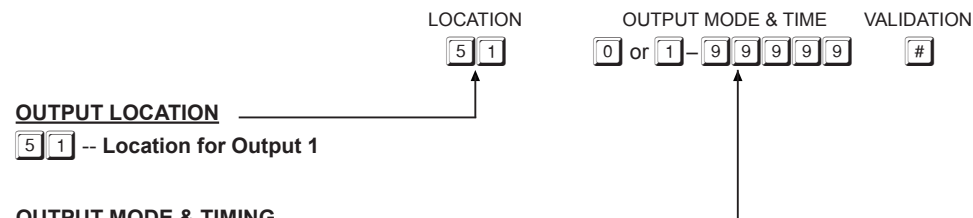

### OUTPUT LOCATION

5 1 -- Location for Output 1

### OUTPUT MODE & TIMING

0 – Start /Stop Mode (Toggle)

The number 0 sets the output to the **Start / Stop mode**. The output **Starts** when an User PIN and/ or Card is entered/read; the output **Stops** when an User PIN and/or Card is entered/read again.

1-99999 Seconds Momentary --- (Default -- Momentary 5 Seconds)

The output can be set in **Momentary Mode** with the time of 1 second to 99,999 seconds. The output will reset automatically when the time expires OR it can be **RESET manually at anytime with the Super User Code** before the end of the time.

**Example :** Reset Output 1 -- SUPER USER CODE # 1 ----- Output 1 resets

## PERSONAL SAFETY AND SYSTEM LOCK-UP

(Location 60)



### SAFETY & LOCK-OUT OPTIONS

The Options are represented by their Mode Numbers in programming. They are described below:

1 --- After 10 successive false Card/User Code trials, the keypad locks during 60 seconds. -- (Default)

5 - 1 0 --- Selection of after 5 to 10 successive Card/User Code trials, the keypad locks during 15 minutes.

The keypad can be reset to release the lock-up with the "Super User Code" in the following way.

**Example :** Release the lock-up -- SUPER USER CODE # 9

0 0 --- Disappearance of all the above lock-up securities.

## VISITOR CODES

(Location 40)

The Visitor Codes are the temporary user codes for operating of the Output 1 (mainly for door lock strike in access control). They can be programmed as “One Time Codes” or “Codes with Time Limit”. The Visitor Codes will be cleared automatically after use if they are one time codes, or, when the allowed time expires.

LOCATION VISITOR ID VALID PERIOD VISITOR CODE VALIDATION

-     or   -   -8 DIGITS

### VISITOR ID

50 Visitor IDs for storing the codes. They are represented by a Two-digit ID Number of   to  .

= Clear all the Visitor Codes in Location 40.  
Please see the Programming example below for the details.

### VALID PERIOD

The codes in this box **MUST** be two digits and they represent the time of the operation.

#### --- One Time Code

One Time Code has no time limit but it can only be used for ONCE. It is cleared by the system automatically after use.

#### - --- Time Limit in Hour(s)

The Visitor Code can be set with the valid time limit of 1 Hour to 99 Hours with a two-digit number of 01 to 99. The visitor code is cleared by the system when the time limit reaches.

### VISITOR CODES

- When a new Visitor Code is put in the same Code box, the old code is replaced.
- The Visitor Codes can be 4-8 digits for the Manual Mode code entry.
- The Visitor Codes **MUST** be in the same digit length with the Master Code for Auto Mode code entry.

**NOTE:** All Visitor Codes will be cleared after power down to prevent extension/confusion of their valid time limit.

### EXAMPLES:

**Example 1:** Set a “One Time Visitor Code” with the number of “1 2 6 8” for the Output 1

(a) (b) (c) (d) (e)

(a) Visitor Code Programming, (b) The Visitor ID, (c) An One Time Code, (d) The Visitor Code, (e) Entry Confirmation

**Example 2:** Set a “Visitor Code” with the number of “1 3 7 8” that is valid for three hours for the Output 1

(a) (b) (c) (d) (e)

(a) Visitor Code Programming, (b) The Visitor ID, (c) Valid for 3 Hours, (d) The Visitor Code, (e) Entry Confirmation

**Example 3:** Delete a “Visitor Code” from Visitor ID   in the memory

(a) (b) (c)

(a) Visitor Code Programming, (b) The Visitor ID, (c) Delete Confirmation

**Example 4:** Clear all “Visitor Codes” from Location

(a) (b) (c)

(a) Visitor Code Location, (b) The Deletion Command Code, (c) Confirmation, all Visitor Codes are cleared

## 6) Record an “EM Card + Common User Code” to Operate The Output 1 for Door Open

READ CARD

(a) (b) (c) (d) (e)

(a) 10 = Programming Location for Output 1

(b) 4 = Programming option for EM Card + Common User Code

(c) 004 = One of the 1,000 User IDs for the User PIN/Card from 000-999

(d) Read Card = Put the Card close to the card reader

(e) # = Confirm the card is read, 2 beeps, the Common User Code goes to this User ID automatically  
(f) A Common User Code (for example: 8 6 2 5) **MUST** be set at the Programming **Location 03** first for this operation mode. The code can be used for all the EM Cards in this operation mode.

### REMARK:

If more User PINs and Cards are required for Output 1, repeat the procedures (3) , (4) , (5) or (6) above with other User IDs, such as 005, 006, 007 --- 999 etc. Total 1,000 users are allowed. See Programming Location 10 for the details.

## 7) Close The Programming Mode

--- 2 beeps

The programming mode is closed. The keypad is back to normal operation mode

### OPERATION

#### 8) Open The Door with The EM CARD

READ CARD --- 2 beeps, the door is open

#### 9) Open The Door with The User PIN

--- 2 beeps, the door is open

#### 10) Open The Door with The EM CARD + User PIN

READ CARD      --- 2 beeps, the door is open

#### 11) Open The Door with The EM CARD + Common User Code

READ CARD      --- 2 beeps, the door is open

### REMARK:

In the next Section, “**KEY IN AND STORE THE DESIRED VALUES**” describes all the features and functions of the system in detail. Users can follow them to tailor the desired values for their access control systems. Suggest the general users also spend some time on them to get acquainted with this powerful system for future expansion.

## FEATURE PROGRAMMING -- KEY IN AND STORE THE DESIRED VALUES

The feature values can be set and stored into the system one by one with the desired Programming Locations. Programming can be made continuously and it is not necessary to be in sequence order. Just go to the desired programming location and key in the value for the desired feature.

### IMPORTANT NOTE --- Programming Criteria for Codes:

#### a) The Prime Codes:

All the Private User PINs, Master Code, Duress Codes, Super User PIN, Common User Codes and the Visitor User Codes belong to Prime Codes in the system. They have the priority to be read and they **MUST be unique** and can not be repeated in the programming. A Prime code also can **NOT** be duplicated for Secondary code to work with the EM Card or vice versa.

#### b) The Prime Cards:

All the EM Cards used in this system are Prime Cards. The cards **MUST be unique** and can not be repeated use. The Card always has the priority to be read when working with an User PIN in "EM Card + Secondary PIN" or "EM Card + Common User PIN".

#### c) Warning for A Repeated Use of Prime Code or Card:

One long beep is given if a Code/PIN is keyed in or a Card is read. It means that a Prime Code or a Prime Card is repeated. The Code/PIN or Card was already in one of the PIN or Card Locations or IDs. The programming is invalid. Change a new Code/PIN or Card and program it again.

#### d) Secondary User PINs:

The Secondary User PINs are prepared to enhance security. It is put after a Card in "**EM Card + Secondary User PIN**" programming. They can be a repeated code within the Secondary PINs but it is **NOT** allowed a duplicate of the Prime Codes. The system will reject a duplicated Prime Code for Secondary User PIN or vice versa.

#### e) Getting Advantages from The Secondary User PINs:

The repeated Secondary PINs can be used as a Group Common User Code or called Department User Code for a group of EM Cards, which simplifies the programming of using large number of different User PINs. EM Card with Department Code prevents a lost card used by people of other department. Also, it will be easier to trace out the department of the lost card belongs to. Of course, the owner can use a proprietary Secondary User PIN for each EM Card in the "**EM Card + Secondary User PIN**" programming to further increase the security if it is the main concern.

#### f) Security Level Comparison of The Secondary User PIN/Code following Card Reading:

- EM Card + Common User Code --- All EM Cards use the same User Code. Security level is better than just Card only. A lost Card picked up by any people can be used if he knows the Common User Code.
- EM Card + Department User Code --- The EM Cards are divided into groups with a Department User Code. A lost Card can be used only by the people in the same group who know the Department Code.
- EM Card + Secondary User PIN --- Each EM Card has its own proprietary User PIN. A lost Card can not be used by other people.

#### g) Make A List Recording of The User Names VS User Codes:

Suggest the owner to make a list recording of the User Names corresponding to the Codes/PINs/Cards that are going to store in the Locations and the IDs before the programming. It will be a useful tool for the owner to easily program them smoothly and also to trace them from this multi-users system in the future.

**Example:** (Please see the following page)

### 4) Example 4 -- EM Card + Common User PIN :

#### i) Programming :

- (a) The card is programmed for operating of the Output 1

(b) The operation is "EM Card + Common User PIN"

(c) Take ID number 004 in Group 1 to store the card, which is one of the IDs in 000-999

(d) Put the card close to the reader. One beep confirms the reading. (No need to key in a Common User PIN but there **MUST** be a Common User PIN already recorded in Location 03.

(e) Press # to store the "Card" into memory. Two-beep confirms a valid entry

#### ii) Operation : (while the system is back to operation mode)

- (a) Put the EM card close to the reader. One-beep confirms the reading and 30 seconds waiting time is given for the entry of the Common User PIN, the Amber LED keeps flashing

(b) Key in the Common User PIN "1 3 5 7" (the number programmed in "Location 0 3" for Output 1 in the previous Example)

(c) Confirm it with the # key. Output 1 activates

### 5) Example 5 -- Delete an User PIN & / or EM Card :

#### i) Delete An User PIN or A Lost EM Card

- (a) Key in the User Group that the User ID belongs to. "10" for the Group 1. This keypad has user Group 1 only.

(b) Key in "5" that is the Command Code for making a deletion

(c) Key in the User ID that stored the User PIN, the lost EM card or the EM Card+User PIN

(d) Press the # key. Two-beep confirms a valid entry and the PIN and/or Card in that User ID is cleared

#### ii) Delete an EM Card

- (a) Key in the User Group that the User ID belongs to. "10" for the Group 1. This keypad has user Group 1 only.

(b) Key in "5" that is the Command Code for making a deletion

(c) Put the EM card close to the reader. One-beep confirms the reading. Read the Card only also makes a valid deletion to the Card working with the Common User PIN or the Secondary User PIN

(d) Press the # key. Two-beep confirms a valid entry. The EM Card in that User ID is cleared. Key in the User ID is not required.

### 6) Example 6 -- Clear The Whole Group of Users :

Whole group of users including the PINs and Cards can be cleared with the following command.

- (a) The User Group 1 - "10" is selected to be cleared. This keypad has user Group 1 only.

 
(b) Key in the Group Deletion Command, **0 9 9 9**

(c) Confirm the deletion with #. All the User PINs and Cards in the Group 1 are cleared. It takes few seconds to a minute to complete depending on the data stored.

## EXAMPLES – PROGRAMMING AND OPERATION

### 1) Example 1 -- EM Card Only :

#### i) Programming :

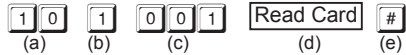

- (a) The card is programmed for operating of the Output 1  
 (b) The operation is EM Card only  
 (c) Take ID number 001 in Group 1 to store the card, which is one of the IDs in 000-999  
 (d) Put the card close to the reader to read it, one beep confirms the reading  
 (e) Press # to store the "Card" into memory, two-beep confirms a valid entry

#### ii) Operation : (while the system is back to operation mode)

 
Read Card

(a)

- (a) Put the EM card close to the reader. Two-beep confirms the card is read and the Output 1 activates

### 2) Example 2 -- Private User PIN Only :

#### i) Programming :

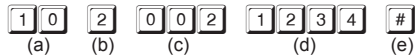

- (a) The Private User PIN is programmed for operating of the Output 1  
 (b) The operation is Private User PIN only  
 (c) Take ID number 002 in Group 1 to store the Private User PIN, which is one of the IDs in 000-999  
 (d) Put Private User PIN "1 2 3 4" into the storage location  
 (e) Press # to confirm and store the "Private User PIN" into memory, two-beep confirms a valid entry


#### ii) Operation : (while the system is back to operation mode)



 - (a) Key in the Private User PIN "1 2 3 4"  
 (b) Confirm it with the # key. Output 1 activates

### 3) Example 3 -- EM Card + Secondary User PIN :

#### i) Programming :

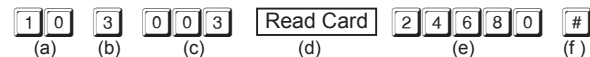

- (a) The card is programmed for operating of the Output 1  
 (b) The operation is EM Card + Secondary User PIN  
 (c) Take the ID number 003 in Group 1 to store the Card & PIN, which is one of the IDs in 000-999  
 (d) Put the card close to the reader. One beep confirms the reading  
 (e) Put Secondary User PIN "2 4 6 8 0" into the storage location  
 (f) Press # to store the "Card + Secondary User PIN" into memory, two-beep confirms a valid entry

#### ii) Operation : (while the system is back to operation mode)



- (a) Put the EM card close to the reader. Two-beep confirms the reading and 30 seconds waiting time is given for the entry of the User PIN, the Amber LED keeps flashing  
 (b) Key in the Secondary User PIN "2 4 6 8 0"  
 (c) Confirm it with the # key. Output 1 activates

### Example:

User	Name	Location	Function Code	User ID	PIN/Code	Card #	Remark
1							
2							
3							
4							
5							
6							
7							
8							
9							
10							
11							
12							
13							
14							
15							
16							
--							
1,000							

### RECORD A MASTER CODE

(Location 01)



#### MASTER CODE

- Master Code is the authorization code for setting the system to programming mode. It is **NOT** an User Code operating of the output relays.
- The Master Code can be 4 to 8 digits. Press # key to confirm code entry
- When a new master code is keyed in and confirmed, the old master code is replaced automatically.

#### Example:

- Set a Master Code with the number of "2 2 3 3" ---- 0 1 2 2 3 3 #

### RECORD A SUPER USER PIN

(Location 02)

The Super User PIN has TWO functions. It is prepared for the owner to use it to operate the keypad under inhibit condition and make operation of inhibit enable / disable to the system output.



#### SUPER USER PIN

- The Super User PIN can be 4 to 8 digits.
- Two beeps will be heard after pressing the # key to confirm code entry.
- When a new Super User PIN is keyed in and confirmed, the old one is replaced.

#### Example:

- Set a Super User PIN with the number of "2 5 8 0" ---- 0 2 2 5 8 0 #
- To deleted a Super User PIN from memory: Key in just the Location number and #. ---- 0 2 #

## OPERATION AND FUNCTIONS OF THE SUPER USER PIN

### 1) Operate Output 1 (Output Relay 1)

The operation of the Super User PIN is just like a normal User PIN. Simply key-in the PIN with a specific output number for the Output. The Super User PIN can also be used to reset an operating output timer instantly.

[SUPER USER PIN] [#] [1] ----- Output 1 Activates or Resets

### 2) Inhibit The User PINs For Output 1

The Super User PIN can also be used to inhibit the normal User PINs/Cards for the Output 1 (usually they are for door strike). It enhances the security level of the access control system, such as to stop a keypad after office hour or while the house is nobody inside. Once the Output 1 is inhibited, the User PINs/Cards for it become invalid and those people even know the User PINs are refused during the system is inhibited. The inhibit function is toggled in Start / Stop mode with the following code entry.

[SUPER USER PIN] [#] [9] ----- The Whole Group of User PINs & Cards for Output 1 are Disabled or Enabled in Toggle

#### NOTE:

- The inhibit function setting with the Super User PIN applies to the whole group of User PINs and Cards for Output 1.
- For safety reason, the inhibit function initiated with the Super User PIN does not govern the Egress Button. The door still can be opened with it from inside.
- The function of the Super User PIN is not affected in the Inhibited Mode or Lock-up Mode. It is always a normal user code for Output 1.

## RECORD THE COMMON USER PINS FOR OUTPUT 1

(Location 03)

The Common User PIN is prepared for operating of the Output 1 as an enhance code. The Common User PINs **MUST** work in the form of "Card + Common PIN" to operate the outputs to increase the security of the access control system. See Location 10 for more information.

**NOTE** : Common User PIN alone can **NOT** be used to operate Output 1 directly.

LOCATION [0] [3] COMMON USER PIN [4 to 8 Digits] VALIDATION [#]

### COMMON USER PIN LOCATION

- [0] [3] -- Location Stores The Common User PIN for Output 1

### COMMON USER PINS

- The Common User PIN can be 4 to 8 digits. Press # key to confirm the code entry.
- When a new Common User PIN is keyed in and confirmed, the old one is replaced.

#### Example:


- Set a Common User PIN with the number of "1 3 5 7" for Output 1 --- [0] [3] [1] [3] [5] [7] [#]
- To deleted a Common User PIN from memory: Key in just the Location number and #. --- [0] [3] [#]

## RECORD - DELETE PINS OR CARDS FOR OUTPUT 1

(Location 10)

Total of 1,000 **User PINs and/or Cards** are available for controlling of the output relay 1.

The Private User PINs and Cards **MUST** be unique. Repeated PINs will be rejected. Secondary User PINs in the "EM Card + Secondary User PIN" can be repeated. See the **Important Note --- Programming Criteria for Codes** in page 16 for more information.

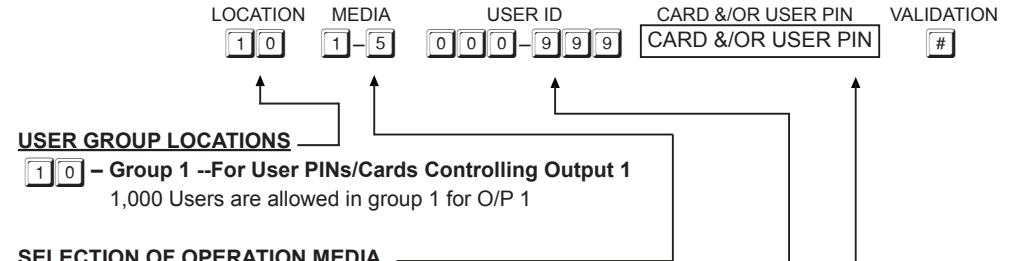

### SELECTION OF OPERATION MEDIA

- Number 1, 2, 3 or 4 represents the Media to be used to operate the keypad.
- Number 5 is the authorization code for deleting of an PIN and/or Card from its User ID.

- [1] = EM Card only; [2] = Private User PIN only;
- [3] = EM Card + Secondary User PIN [4] = EM Card + Common User PIN
- [5] = Delete an User PIN &/or Card from the selected User ID number

[0] [9] [9] [9] = Clear all the PINs & Cards in the selected Location. It takes few seconds to a minute to complete depending on the quantity of data stored. Please see the programming example for the details.

### USER ID NUMBER

- A **3-digit** ID is an identified number for each User PIN and/or Card.
- Repeated ID number will be rejected by the system

ID Number [0] [0] [0] - [9] [9] [9] for 1,000 User PINs/Cards to operate Output 1

### CARD &/OR USER PINS

- The User PINs can be 4-8 digits. Key in the User PIN on each ID Number box, then confirm it with # key
- Just simply put the EM card close to the reader window to read it on each ID Number box, then confirm it with # key if it is a **Card ONLY**, or **Card + Common User PIN** entry. The Common User PIN is **NOT** required to key-in here. It will go into its location automatically after the Card is read.
- Read the Card first, then key in the Secondary User PIN on each ID Number box, then confirm it with # key if it is **Card + Secondary User PIN**. The Secondary User PINs can be duplicated or a proprietary User PIN but can not be a duplicate of a Prime Code. Owner can use the same secondary User PIN for a group of Cards as a group Common User Code (or called Department Code) for a specific relay output.
- Cards (Operation Media # 1, 3, & 4) and Private User PINs (Operation Media 2) **MUST** be unique. A repeated EM card or Private User PIN will be rejected and one long beep will be generated by the system to notify the owner.